

LCD-TIMER- Operating Instructions Art.no. 38.2005

Setting the time

- Push the **"MIN"**- and **"SEC"** button at the same time to reset the timer.
- Push the **"MIN"**- button to set the minutes (beeping sounds). For a rapid advancement function keep the **"MIN"**- button pressed.
- Push the **"SEC"** button to set the seconds (beeping sounds). For a rapid advancement function keep **"SEC"** button pressed.

Time measurement

- If the time setting is finished, push the **"START/STOP"** button to begin the countdown. The letters **"M"** and **"S"** are flashing during the timing.
- To stop the countdown process, press the **"START/STOP"** button. The letters **"M"** and **"S"** will stop flashing and remain steady.
- Push the **"START/STOP"** button again to continue the countdown process.

Alarm

- When the timer counts down to **"OOM OOS"**, a beeping alarm will sound for 30 seconds.
- To turn off the alarm, press the **"START/STOP"** button.

Memory function

- After the alarm has stopped the timer will recall the last selected time automatically.
- Press the **"START/STOP"** button to repeat the countdown.

Battery replacement

Open the battery cover with a coin. Insert a new button cell battery into the opening. Make sure the positive (+) side is facing up. Close the battery cover again.

Attention: Used batteries have to be put in the specially reserved collecting receptacles.

Source of error:

Please change the battery before complaining. No guarantee if the instrument is handled or opened improperly.

Keep away from the reach of children!